

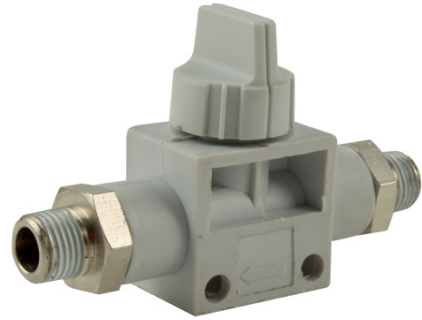


# PUSH-IN CONNECTORS PLASTIC



## VALVE MANUAL

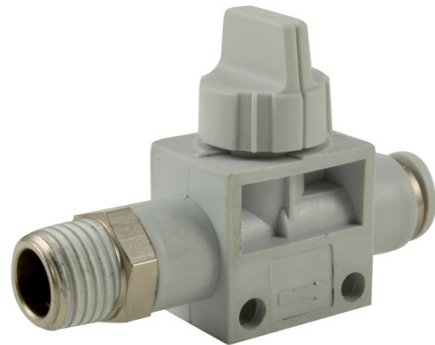
### VALVE MANUAL BSPT PLASTIC

		
33006610	1/8"	1/8"
33006620	1/4"	1/8"
33006630	1/4"	1/4"
33006640	1/4"	3/8"
33006650	3/8"	3/8"
33006660	1/2"	3/8"
33006710	1/2"	1/2"





### VALVE MANUAL PUSH-IN / BSPT PLASTIC

		
33006720	6	1/8"
33006730	6	1/4"
33006740	6	3/8"
33006810	8	1/8"
33006820	8	1/4"
33006830	8	3/8"
33006840	10	1/4"
33006850	10	3/8"
33006860	10	1/2"
33006910	12	1/4"
33006920	12	3/8"
33006930	12	1/2"



### VALVE MANUAL PUSH-IN PLASTIC

		
33006940	4	4
33007110	6	4
33007120	6	6
33007130	8	6
33007140	8	8
33007150	10	10
33007210	12	10
33007220	12	12

